

Wind Explorer Components Map

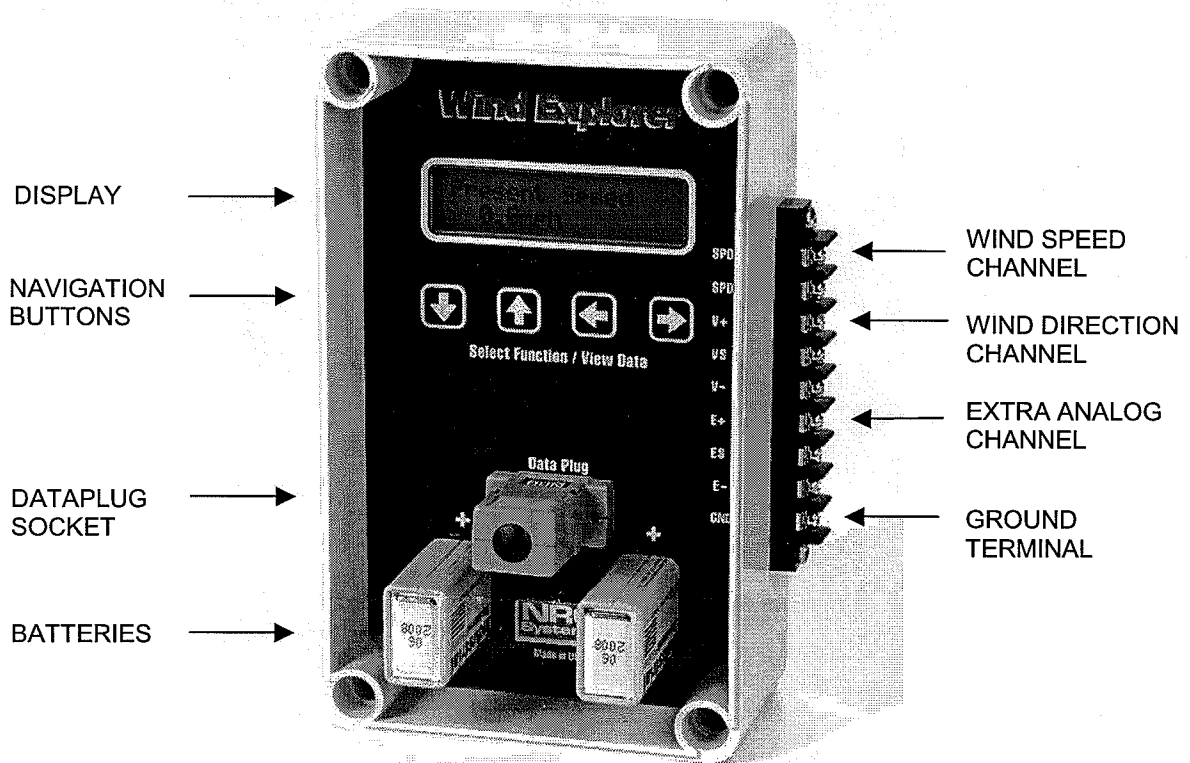


Figure 1: Wind Explorer Front Panel

Display

The liquid crystal display is activated by pressing any button on the instrument's faceplate. As a power saving function, the display will always shut off after 1 minute without any buttons pressed. Press and hold any button for 4 seconds to reactivate display.

Navigation Buttons

The Wind Explorer display and control functions are organized as columns and rows of pages. You can move from page to page using the four arrow direction keys below the display. In this manual, we show these four keys as **[Up]**, **[Down]**, **[Left]**, and **[Right]**.

9 volt batteries

Two 9 V alkaline batteries are included with your Wind Explorer. These batteries will run the instrument for about 1.5 years before requiring replacement.